Type SUP 021
Type SUP 021 Y

ITALIANO
ENGLISH
DEUTSCH
FRANÇAIS

CE

Manuale uso e manutenzione
Prima di utilizzare la macchina consultare le presenti istruzioni. Leggere attentamente le norme di sicurezza

Operation and maintenance manual
Before using the machine, please read the attached operating instructions. Carefully read the safety rules

Bedienungsanleitung
Bitte lesen Sie diese Bedienungsanleitung und die Sicherheitsvorschriften vor Verwendung des Milk Island aufmerksam durch.

Mode d'emploi
Veuillez lire attentivement le mode d'emploi (notamment les consignes de sécurité) avant d'utiliser l'appareil.

FOR HOUSEHOLD USE ONLY
USAGE DOMESTIQUE SEULEMENT

Saeco

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

1 Read all instructions and information in this instruction book and any other literature included in this carton referring to this product before operating or using this appliance.
2 Do not touch hot surfaces. Use handles or knobs.
3 To protect against fire, electric shock and personal injury do not immerse cord, plugs or appliance in water or other liquid.
4 Close supervision is necessary when any appliance is used by or near children.
5 Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
6 Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any way. Return appliance to the nearest authorized service centre for examination, repair or adjustment.
7 The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock or personal injury.
8 Do not use outdoors.
9 Do not let cord hang over edge of table or counter, or touch hot surfaces.
10 Do not place on or near a hot gas or electric burner, or in a heated oven.
11 Always turn appliance "OFF", then plug cord into the wall outlet. To disconnect, turn switch to "OFF", then remove plug from wall outlet.
12 Do not use appliance for other then intended household use.
13 Use extreme caution when using hot steam.

SAVE THESE INSTRUCTIONS

CAUTION

This appliance is for household use. Any servicing, other than cleaning and user maintenance, should be performed by an authorized service centre. Do not immerse base in water. To reduce the risk of fire or electric shock, do not disassemble the base. There are no user serviceable parts inside. Repair should be done by authorized service personnel only.

1 Check voltage to be sure that the voltage indicated on the nameplate agrees with your voltage.
2 Never use warm or hot water to fill the water tank. Use cold water only.
3 Keep your hands and the cord away from hot parts of the appliance during operation.
4 Never clean with scouring powders or hard implements. Simply use a soft cloth dampened with water.
5 To avoid your coffee maker scaling up, use purified or bottled water.

INSTRUCTIONS FOR THE POWER SUPPLY CORD

A A short power-supply cord is provided to reduce risks of getting tangled up or tripping over a longer cord.
B Longer extension cords are available and may be used if care is exercised in their use.
C If a long extension cord is used:
  1 the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance.
  2 if the appliance is of the grounded type, the extension cord should be a grounding type
  3 the cable does not hang from the table to avoid the risk of getting caught up in it.

GENERAL INFORMATION

The coffee machine is suitable to make espresso coffee using coffee beans and is equipped with a device for the distribution of steam and hot water.
This elegantly styled machine is designed for household use only. It is not suitable for continuous professional-type use.

Warning. The manufacturer shall accept no liability for damage or injury caused by:
- improper use or use for other than the intended purposes;
- repairs carried out by anyone other than an authorised service centre;
- tampering with the power cord;
- tampering with any machine component;
- use of spare parts and accessories other than those supplied by the manufacturer.

The warranty will be invalidated in such cases.

TO FACILITATE INTERPRETATION

A warning triangle draws attention to the instructions that are important for user safety. Please carefully abide by these instructions to avoid serious injury!

HOW TO USE THESE OPERATING INSTRUCTIONS

Keep these operating instructions in a safe place and make them available to anyone else who should use the coffee machine. For further information or an explanation of problems not completely or sufficiently addressed in these instructions, contact an authorised service centre.

TECHNICAL SPECIFICATIONS

• Voltage rating	See rating plate on appliance
• Power rating	See rating plate on appliance
• Power supply	See rating plate on appliance
• Casing material	Metal
• Size (w x h x d) (mm)	275 x 350 x 420
• Weight (Kg)	10
• Cord length (mm)	1200
• Control panel	Front
• Water tank (lit.)	1.8 - Extractible
• Pump pressure (bars)	15
• Boiler	Stainless steel
• Coffee container capacity (g.)	180 of coffee beans
• Safety devices	Boiler pressure safety valve safety thermostat

Subject to engineering and manufacturing changes as warranted by technological developments.

Machine in conformity with European Directive 89/336/EEC (Italian Legislative Decree 476 of 04/12/92) concerning electromagnetic compatibility.

4 SAFETY RULES

In the event of an emergency
Immediately unplug the appliance.

The appliance may only be used
- In a closed place.
- To prepare coffee, dispense hot water, froth milk or heat beverages using steam.
- For household use.

Never use the appliance
for purposes other than those indicated above to avoid hazards.
Never place any substances in the containers other than those specified in the instruction manual.
When you fill a container, make sure all nearby containers are closed.
Fill the water tank only with fresh drinking water: hot water and/or other liquids may damage the machine.
Do not use carbonated water.
The coffee grinder may be adjusted only while it is running.
Do not introduce your fingers or any material other than coffee beans into the coffee grinder.
Before attempting to access the inside of the coffee grinder, switch OFF the machine and remove the plug from the electric socket.
Any water left in the tank for several days should not be consumed. Wash the tank and refill it with fresh drinking water.

Mains connection
Connect the coffee machine to a suitable electric socket. The voltage must match the voltage specified on the appliance rating plate.

Installation
- Choose a perfectly level supporting surface. Do not place on a hot surface!
- Maintain a distance of 10 cm from walls and electric or gas burners.
- Do not keep at temperatures below 0 °C; the appliance may be damaged by freezing.
- The electric socket must be accessible at all times.
- The power cord must not be damaged, secured with clamps, placed on very hot surfaces etc.
- Do not let the power cord hang loosely (Warning: danger of tripping or of causing the appliance to fall).
- Do not use the power cord to carry or pull the coffee machine.

Hazards
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- The appliance is dangerous for children. If left unattended it must be switched off.
- Do not leave the materials used to pack the appliance within children's reach.
- Do not direct a jet of hot steam and/or hot water toward yourself or others: danger of scalding.
- Do not introduce any objects through the openings in the appliance (Electrical hazard!).
- Do not touch the plug when your hands or feet are wet. Do not unplug the appliance by yanking at the power cord.
- Warning: contact with hot water, steam or and hot water/steam nozzle may cause burns.

Faults
- Do not use the appliance if it malfunctions or you suspect damage, e.g. after a fall.
- Repairs must be performed by an authorised service centre.
- Do not use an appliance with a defective power cord. Should the power cord be damaged, it must be replaced by the manufacturer or his customer service department. (Electrical hazard!).
- Switch off the appliance before opening the service door. Danger of burns!

Cleaning / descaling
- Before cleaning the appliance, unplug it and allow it to cool down.
- Avoid exposing the appliance to splashes of water. Do not immerge it in water.
- Do not dry machine components in a conventional or microwave oven.
- Do not use spirit, solvents and/or aggressive chemical agents.

Spare parts
To guarantee safety, you should use only original spare parts and accessories.

Disposal
For a correct disposal of the machine, please follow the instructions contained on the last pages of the manual (see page 18).

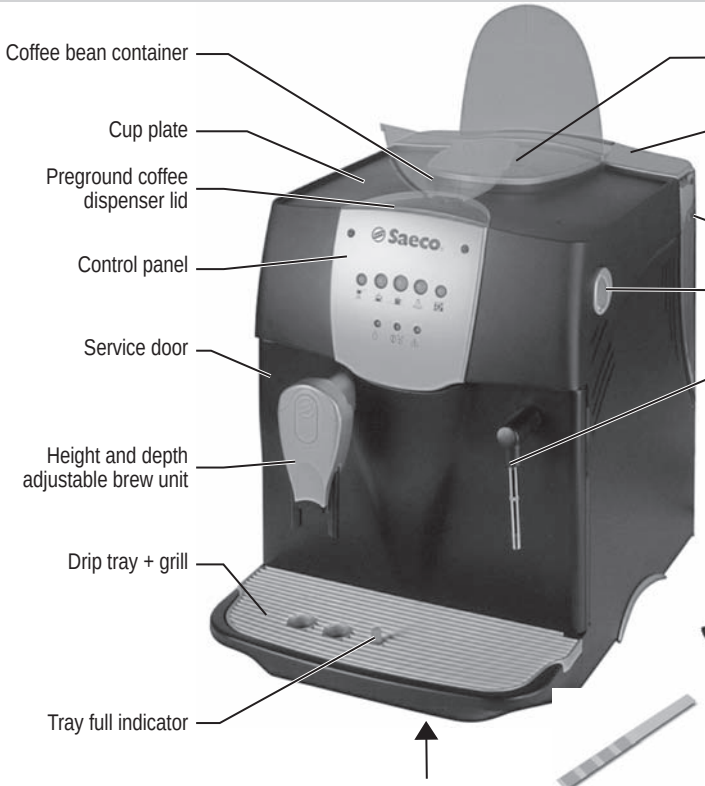
Coffee bean container
Coffee bean container lid
Cup plate
Water tank lid
Preground coffee dispenser lid
Water tank
Control panel
Steam knob
Service door
Hot water/ steam tube
Height and depth adjustable brew unit
ON/OFF switch
Drip tray + grill
Cleaning brush
Tray full indicator
Swivel base
Water hardness test
Preground coffee measure

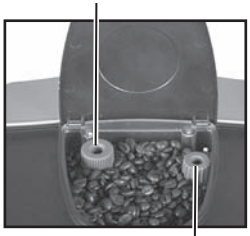
Grind adjustment knob
Dose adjustment knob

Brew group
Dregs drawer

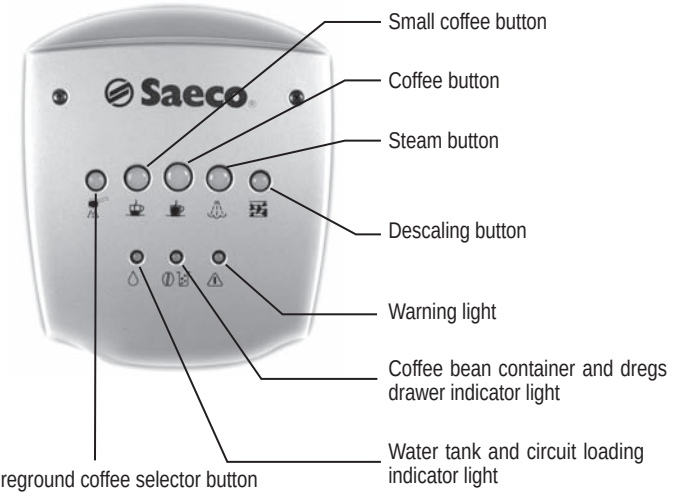
Small coffee button
Coffee button
Steam button
Descaling button
Warning light
Coffee bean container and dregs drawer indicator light
Water tank and circuit loading indicator light
Preground coffee selector button

6 INSTALLATION / CIRCUIT LOADING

The messages displayed by the machine during operation are shown on pg.17.

Check that all components are correctly placed.

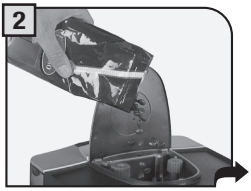

Fill the coffee bean container with coffee beans.

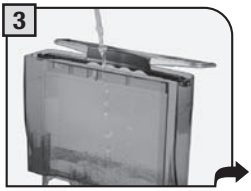

Fill the tank with fresh drinking water.

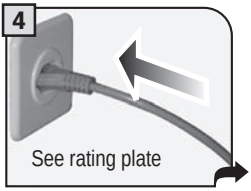

Insert the plug into a suitable electric socket.

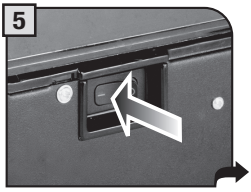

Move the ON/OFF switch to “I” to turn on the machine.

The machine is warming up; lights are flashing.

Place a container under the steam tube.

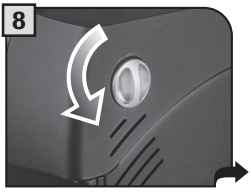

Turn the knob counterclockwise to start loading the circuit.

Wait until a steady stream of water flows out from the nozzle.

Turn the knob clockwise to terminate the circuit-loading process.

Remove the container.

When lights remain steadily lit, the machine is ready for use.

Note: You must load the circuit before starting up the **machine for the first time, if it has been inoperative for** a lengthy period or if the water tank has been completely emptied. The circuit must also be loaded each time **the light flashes:**

Adjust water hardness as shown on page 15.

FIRST USE EVER OR FIRST USE AFTER A LONG PERIOD OF INACTIVITY

These operations ensure an optimum brewing and must be performed: 1) At first start-up 2) When the machine remains inactive for a long time.

1

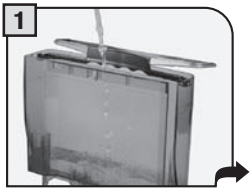

Rinse the water tank with clean drinking water and fill it again.

2

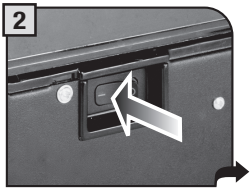

Switch the power button to "I" to turn the machine on.

3

When the indicator lights are steady on, the machine is ready for use.

4

Place a coffee cup under the dispensing spout.

5

Select the function "Ground coffee". DO NOT add the ground coffee.

6

Press the "long coffee" button. The machine starts brewing the coffee.

7

At the end of the process, empty the cup.

8

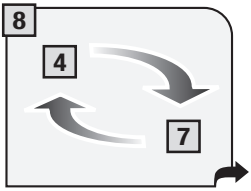

Repeat the operations from steps 4 to 7 five times. Then, proceed with step 9.

9

Place a large container under the steam wand.

10

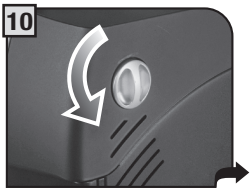

Open the knob to start dispensing water.

11

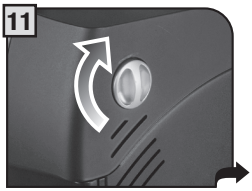

Dispense all the water in the tank. Once finished, close the knob.

12

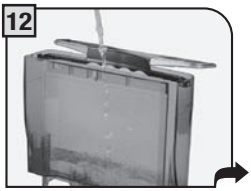

Fill the water tank with fresh drinking water.

13

When the indicator lights are steady on, the machine is ready for use.

8 ADJUSTMENTS

COFFEE GRINDER ADJUSTMENT

Adjustment may be made only while the coffee grinder is operating.

Use coffee bean blends for espresso coffee makers. If you do not obtain the desired result, try using different coffee blends.
Store coffee in a cool place, in a hermetically sealed container.
You will note a change after dispensing 3 - 4 coffees.

If you set the grinder on too fine a grind (knob turned all the way anticlockwise) coffee may flow out in a slow trickle or not at all.

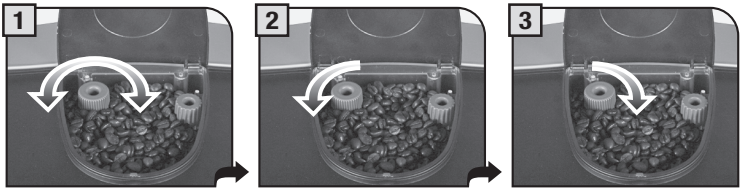

The fineness of the grind may be adjusted using the knob.

Coffee flows out more slowly.

Coffee flows out more quickly.

COFFEE DOSE ADJUSTMENT

You must adjust the dose before dispensing coffee. This adjustment will have an immediate effect on the coffee brewed.

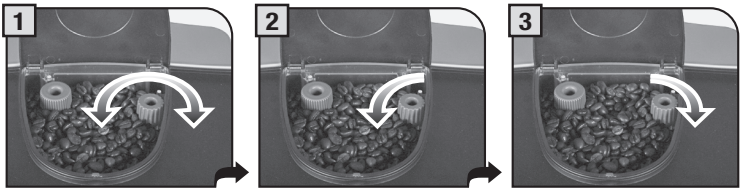

You can adjust the quantity of coffee to be ground.

Stronger coffee.

Weaker coffee.

COFFEE IN CUPS

To adjust the quantity of coffee dispensed to the size of your cups.

Place a cup under the brew unit, press the button corresponding to the type of coffee desired and keep it pressed while coffee is being dispensed.

When the cup has filled to the desired level, release the button; the machine is now programmed to dispense the quantity of coffee you have chosen.

Warning! Hot water and steam may cause burns! Direct the steam tube toward the drip tray.

COFFEE BEANS

Make sure that the machine is ready.
Position a warm coffee cup or cups under the brew unit.

Press the button of the type of coffee desired.
Once for 1 coffee

Twice for 2 coffees.

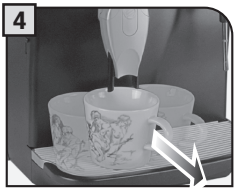

When the machine stops making the coffee, remove the cup or cups.

PREGROUND COFFEE

Make sure that the machine is ready.
Position a warm coffee cup under the brew unit.

Select the product “Pre-ground coffee”.

Introduce ground coffee using the coffee measure.
MAX 1 MEASURE

Press the button of the type of coffee desired.
When the machine stops making the coffee, remove the cup.

HOT WATER

Place a container under the steam tube.

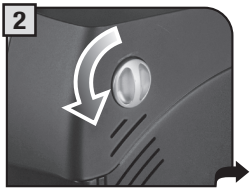

Turn the knob counter-clockwise to start dispensing water.
Wait.

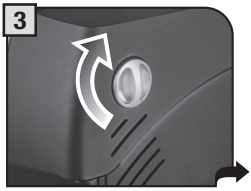

When you reach the desired amount, close the knob.

Remove the container.

10 CAPPUCCINO

Warning! Hot water and steam may cause burns! Direct the steam tube toward the drip tray.

Fill a cup to 1/3 with cold milk.

Press the button to select the function.
The light is flashing.

When the light is steadily lit, the machine is ready to release steam.

Introduce a container.
Open the knob to discharge any residual water.

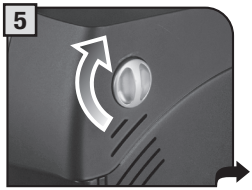

When only steam comes out, close the knob.
Remove the container.

Position the cup containing milk under the steam tube.

Open the knob to release steam.

Move the cup in a circular fashion to heat the milk evenly.

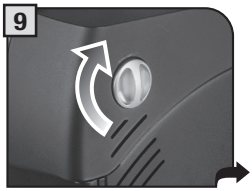

After frothing the milk, close the knob.

Remove the cup.

Press the button to restore the machine to normal operation. Lights are flashing.

Place a container under the steam tube.

Open the knob and dispense hot water.

When lights remain steadily lit, close the knob and remove the container.

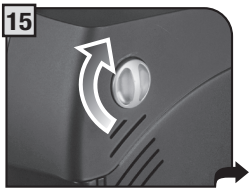

Dispense coffee into the cup to prepare a delicious cappuccino.

Warning! Hot water and steam may cause burns! Direct the steam tube toward the drip tray.

Check the machine status.

Press the button to select the function.
The light is flashing.

When the light is steadily lit, the machine is ready to release steam.

Introduce a container.
Open the knob to discharge any residual water.

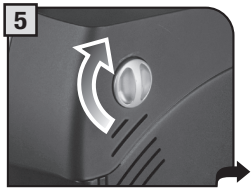

When only steam comes out, close the knob.
Remove the container.

Take and place the container under the hot water/ steam tube.

Open the knob to release steam.

Move the container in a circular fashion to heat evenly.

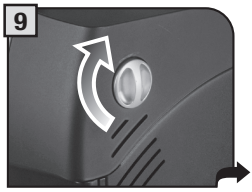

After you have finished, close the knob.

Remove the container.

Press the button to restore the machine to normal operation. Lights are flashing.

Place a container under the steam tube.

Open the knob and dispense hot water.

When lights remain steadily lit, close the knob and remove the container.

The machine is ready to brew coffee or dispense hot water.

12 DESCALING

Limescale normally builds up with the normal use of the appliance. The machine is supplied with a software that warns the user about the need to run a descaling cycle.

Use the Saeco descaling solution only: it has been specially designed to comply with the technical **specifications of the machine, to ensure the machine performance will not decrease over time,** and to guarantee a safe and risk-free use. The descaling solution must be disposed of according to the manufacturer's instructions and/or applicable regulations in the country of use.

Never drink the descaling solution and any substances dispensed until the cycle ends.
Never use vinegar as a descaling solution.

For a correct preparation of the descaling solution, pour the entire content of the Saeco concentrated descaling solution into the water tank, and fill it with fresh water up to the MAX level.

Note: Before starting a descaling cycle make sure that:
1. THE WATER FILTER HAS BEEN REMOVED
2. You have a container of adequate size at hand to be placed in the points identified.

When the machine needs descaling, the indicator light flashes.

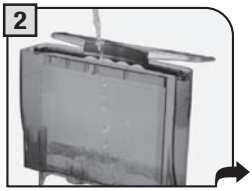

Fill the tank up as previously described to prepare the descaling solution.

Place a large enough container under the steam wand.

Press the button for 5 seconds.

Open the knob.
The descaling cycle starts.

The solution is dispensed at regular intervals.

When the indicator lights flash, the descaling cycle is complete.

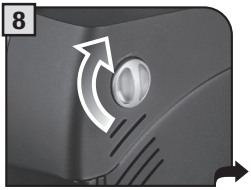

Close the knob.

Remove the container.

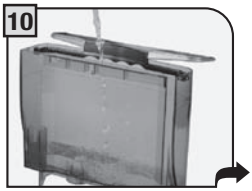

Rinse and fill the tank with fresh drinking water.

Place a large enough container under the steam wand.

Open the knob and rinse.

13

When there is no more water in the tank, close the knob.

14

Remove the container.

15

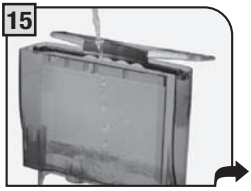

Rinse and fill the tank again with fresh drinking water.

16

Check that the indicator lights turn on and remain still.

17

Place a coffee cup under the dispensing spout.

18

Select the function “Ground coffee”. DO NOT add the ground coffee.

19

Press the “long coffee” button. The machine starts brewing the coffee.

20

At the end of the process, empty the cup.

21

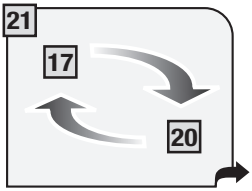

Repeat the operations from steps 17 to 20 five times. Then, proceed with step 22.

22

Place a large container under the steam wand.

23

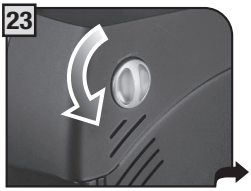

Open the knob to start dispensing water.

24

Dispense all the water in the tank. Once finished, close the knob.

25

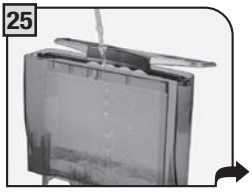

Fill the water tank with fresh drinking water.

26

When the indicator lights are steady on, the machine is ready for use.

If the descaling cycle is interrupted, the water tank and internal machine circuits must be rinsed.

After descaling the machine, reload the machine circuit.

Wash the components as described in chapter “CLEANING AND MAINTENANCE”.

14 CLEANING AND MAINTENANCE

Do not dry the machine and/or its components in a microwave and/or conventional oven.

Do not immerge the machine in water and do not place any of its components in a dishwasher.

BASIC CLEANING

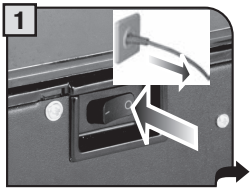

Turn the machine off.
Unplug the machine.

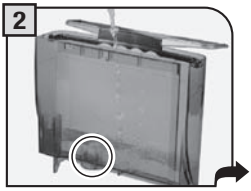

Wash the water tank.
Wash the filter inside it.

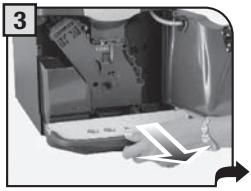

Remove the drip tray, empty it out and wash it.

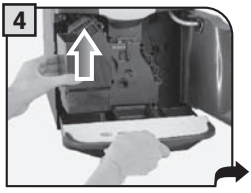

Remove the dregs drawer, empty it out and wash it.

Clean nozzle with damp cloth so that the froth does not dry on nozzle

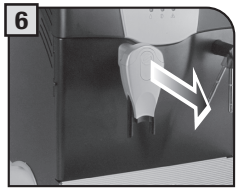

Remove the brew unit and wash it with water.

Clean the machine, its components, and the brew group once a week at least.

Do not use spirit, solvents and/or aggressive chemical agents.

BREW GROUP

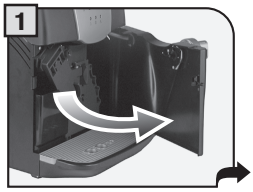

Open the front door.

Remove the drip tray and the dregs drawer.

Press the PUSH button to release the brew group.

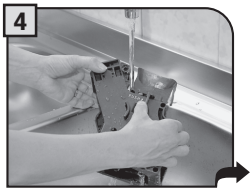

Wash the brew group with running water.

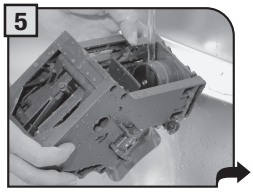

Wash the upper filter carefully.

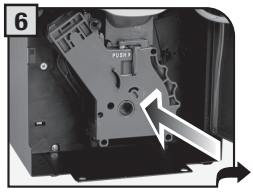

Dry the group and reassemble on the machine.
Do not press the "PUSH" button.

Set all machine components back in position.
Close the door.

The user can change some machine operating parameters to suit his/her personal needs.

PROGRAMMING START

Procedure for accessing machine programming mode.

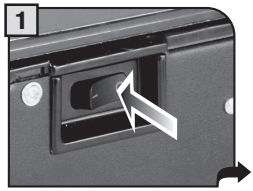

Turn the machine off.

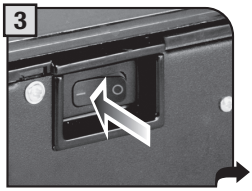

Press the buttons together. Keeping the buttons pressed down, turn on the machine.

WATER HARDNESS

The hardness of tap water may vary depending on the region. For this reason, the appliance can be set according to the water hardness in the place where it is to be used, expressed on a scale of 1 to 4.

The appliance is factory set on a hardness value of 3*. The setting should be adjusted according to the level of water hardness in the local area.

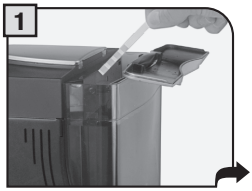

Dip the strip in water for 1 second.

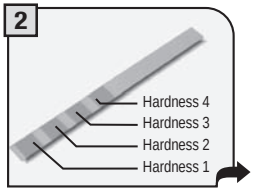

Check how many squares change colour.

Press the button to program the water hardness.

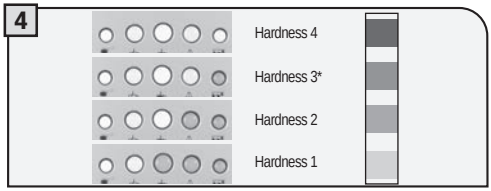

Set the machine according to these indications.
The degree of hardness will be signalled by the indicator lights.

RINSING

When this function is enabled, the internal machine circuits will be rinsed immediately after the warming-up phase to ensure that coffee is prepared with fresh water only.

In all new appliances this function has already been enabled in the factory.

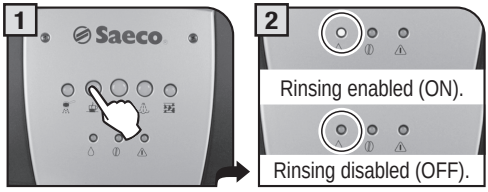

Press the button to set the function.

PREBREWING

With the pre-brewing process the coffee is slightly moistened before actual brewing. This brings out the full aroma of the coffee and lends it an excellent flavour. It is possible to choose either “enabled” or “disabled”.

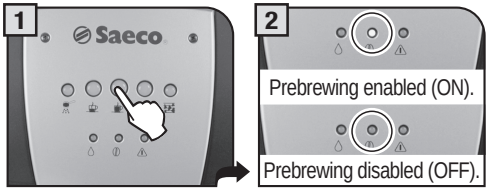

Press the button to set the function.

PREGRINDING

With the pre-grinding process the machine grinds twice: the first time for the type of coffee selected and the second time for the subsequent coffee (not yet selected).
This function is useful when you want to reduce the time necessary for dispensing several coffees in sequence (e.g. while entertaining guests or during a party).

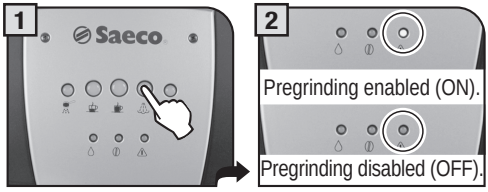

Press the button to set the function.

END PROGRAMMING

This procedure serves to activate all the settings made.

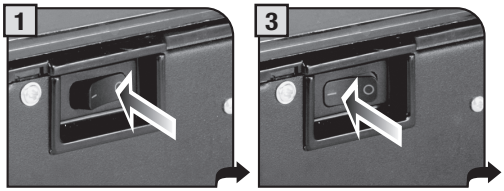

Turn the machine off.

Turn the machine back on to activate the programmed functions.

Flashing

Machine overtemperature. Place a container under the steam tube and open the steam knob. When the lights remain on, close the knob.

Flashing

Descale the machine

Steadily lit

Fill the water tank with fresh drinking water.

Flashing

Load the circuit (Starting up)

Steadily lit

Fill the coffee bean container with coffee beans.

Flashing

Open the door, remove the dregs drawer and empty the used coffee grinds into a suitable container.
Important note: the dregs drawer may be emptied only when the machine is on. The drawer must be removed for at least **5 seconds. If you empty the drawer with the machine off,** you will not be able to dispense coffee the next time you switch the machine on.

Steadily lit

Fit the brew unit, drip tray and dregs drawer correctly into place. Close the front door.

Flashing

Coffee grinder motor jammed. Brew unit motor jammed. Contact an Authorised Service Centre.

PANNARELLO (OPTIONAL)

USING

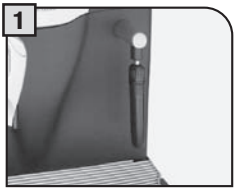

Use the frothing nozzle like the steam nozzle to make wonderfully hot and creamy Cappuccinos.

Proceed as with preparation «STEAM/ CAPPUCINO», immerse nozzle approx. 3-4 cm/1-1.5" in the milk.

CLEANING

AFTER PREPARATION

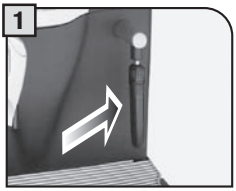

Loosen the cap, remove nozzle.

Clean with damp cloth.

Disassemble nozzle.

Place nozzle parts under running water and remove milk residue.
Dry separate parts, reassemble, and mount on machine.

PROBLEMS - CAUSES - REMEDIES
INSTRUCTIONS FOR END-OF-LIFE DISPOSAL TREATMENT

PROBLEMS	CAUSES	REMEDIES
The machine does not turn on.	The machine is not connected to the power supply.	Move the main switch to ON.
		Check the plug and the connection
The coffee is not hot enough.	The cups are cold.	Warm up the cups.
The machine does not brew coffee.	Knob positioned on too low a setting	Turn the knob clockwise to a higher setting.
No hot water or steam is dispensed.	The tube nozzle is clogged.	Clean the nozzle opening with a needle.
A noise can be heard coming from the steam tube of the machine.		**During this operation, the knob must be closed and the machine must be off.**
The machine takes a long time to warm up.	Excessive scale has built up.	Descale the machine.
The brew unit cannot be removed.	The unit has stopped in the wrong position.	Close the door and switch on the machine; the brew unit will move back into position.
Coffee flows out in slow trickle or not at all.	Excessively fine grind	Adjust to a coarser grind (turn the knob clockwise).
	and too much coffee.	Decrease the quantity.

This product complies with EU Directive 2002/96/EC.

The symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment.

By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.

For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

EC DECLARATION OF CONFORMITY
YEAR 09
EC 2006/95, EC 2004/108

SAECO INTERNATIONAL GROUP S.P.A
- Via Torretta, 240 - 40041 Gaggio Montano (Bo) - Italy

declare under our responsability that the product:
AUTOMATIC COFFEE MAKER

SUP 021 - SUP 021 Y

to which this declaration relates is in conformity with the following standards or other normative documents :

- Safety of household and electrical appliances - General requirements
  EN 60335-1(2002) + A1(2004) + A2(2006) + A11(2004) + A12(2006)+ A13(2008)
- Safety of household and electrical appliances - Part 2-15
  Particular requirements for appliances for heating liquids
  EN 60335-2-15(2002) + A1(2005)
- Household and similar electrical appliances - Electromagnetic fields - methods for evaluation and measurement
  EN 50366 (2003) + A1 (2006).
- Household and similar electrical appliances - safety - Part 2-14
  Particular requirements for kitchen machines EN 60335-2-14 (2006).
- Electromagnetic compatibility (EMC) - Requirements for household appliances , electric tools and similar apparatus - Part 1 - Emission EN 55014-1 (2006).
- Electromagnetic compatibility (EMC) - Part. 3^ Limits - Section 2 : Limits for harmonic current emissions (equipment input current ≤ 16A for phase)
  EN 61000-3-2 (2006)
- Electromagnetic compatibility (EMC) - Part 3^ : Limits - Section 3 : Limitation of voltage changes , voltage fluctuations and flicker in public low - voltage supply systems , for equipment with rated current ≤ 16 A for phase and not subject to conditional connection
  EN 61000-3-3 (1995)+ corr.(1997) +A1 (2001) + A2 (2005).
- Electromagnetic compatibility - Requirements for household appliances, electric tools and similar apparatus - Part 2. Immunity - Product family standard
  EN 55014-2 (1997) + A1 (2001)

following the provisions of the Directives: EC 2006/95 , EC 2004/108.

Gaggio Montano - li, 28/04/2009

R & D Manager
Mr. Andrea Castellani

Cod. 15002069 Rev.00 del 30-09-09

Saeco
International Group S.p.A.

Via Torretta, 240
I-40041 Gaggio Montano, Bologna
Tel: + 39 0534 771111

Fax: + 39 0534 31025
www.saeco.com

Il produttore si riserva il diritto d`apportare qualsiasi modifica senza preavviso.

The manufacturer reserves the right to change the features of the product without prior notice.

Le producteur se réserve le droit d“apporter toutes modifications sans préavis.

Der Hersteller behält sich das Recht vor, Änderungen ohne Ankündigung vorzunehmen.

© Saeco International Group S.p.A.